

DOH 331-342 Nov. 2010

Drinking Water Tech Tips

Troubleshooting Bladder Pressure Tanks

What is a bladder pressure tank?

It is a type of tank containing pressurized air and water separated by a membrane (bladder). They are precharged with air at the factory. On average, a bladder pressure tank lasts 5-7 years.

How do bladder pressure tanks work?

As water pressure changes, the volume of air in a bladder pressure tank contracts and expands. Periodically, the amount of air in the tank should be measured and the tank recharged if the air is too low. Bladder pressure tanks do not provide any useful water storage capacity.

What functions do bladder pressure tanks serve?

- Maintain a desired range of water pressure in the distribution system.
- Minimize pump cycling, preventing frequent starts and stops protecting facilities from damage.
- Protect against water hammer.

Troubleshooting Guide


Check the bladder pressure tank air charge

- Disconnect electrical power to the pump.
- Drain the tank by opening the closest faucet.
- Check tank pressure by placing a tire gauge on the aircharging valve on top of the tank.
- Add air if the pressure is more than 2 psi below the pump cut-in pressure (lowest pressure in the range). Use a tire pump or air compressor. Use caution with an air compressor.
- Release air if the pressure is 2 psi above the pump cut-in pressure.
- Check for leaks in the air charging system. Use a soap solution to check the air-charging valve for leaks.
- Re-start the pump and run through a normal cycle to verify the setting.
- **Helpful hint!** If tank pressure drops, the bladder may have a tear or hole in it.

Check for waterlogged bladder pressure tank problems

A tank is waterlogged if it is completely filled with water or has too much water to function correctly. Waterlogged bladder pressure tanks contribute to the following problems:

- The pump motor cycles turns on and off too often. Frequent cycling can shorten the lifespan of a pump. 1 to 5 HP pump motors should not cycle more than six times an hour. If your pump is cycling, check to see if the tank(s) is waterlogged.
- Unsatisfactory coliform samples or taste and odor complaints. Waterlogged tanks contain stagnant water that can contribute to bacterial problems or taste and odor complaints.
- Premature tank failure. The inside walls of a waterlogged tank can corrode and weaken from the exposure to water.
- **F** Helpful hint! It is often most cost-efficient to replace a waterlogged tank.

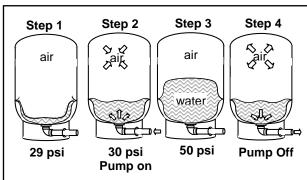

Typical Pump Cycle


- **Step 1. Pump Off:** Tank is nearly empty. Air expands to fill tank volume up to the precharged pounds per square inch (psi).
- **Step 2. Pump Starts**: Water begins to enter the tank, compressing the air.
- **Step 3. Pump Stops**: The system reaches maximum pressure. Air is compressed to the cut-off setting of the pressure switch.
- **Step 4. Pump Off:** When water is demanded, air pressure forces it into the system, and a new cycle begins.

Common pressure ranges are 30 to 50 or 40 to 60 psi.

If your tank is waterlogged, check for possible causes

Bladder pressure tanks can become waterlogged for many reasons. Some of the more commons reasons are:

- Sediment, such as iron and manganese, can coat the surface of a bladder, causing it to harden and become less flexible.
- Sediments can plug the fill or draw line, preventing the tank from filling and emptying normally.
- High levels of chorine can damage the bladder, causing it to become brittle and less flexible.
- Tanks sitting directly on the ground rust and lose structural integrity.
- Chlorinators give off corrosive vapors that cause the tank to rust.

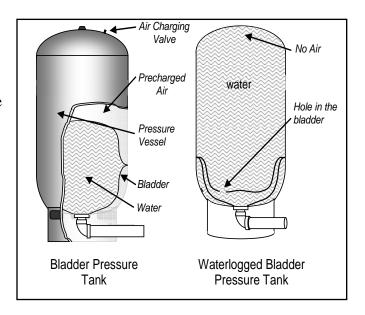

Remember! When working with bladder pressure tanks it is important to read and follow the Manufacturer's Safety Warnings!

For more information

We offer many publications online at https://fortress.wa.gov/doh/eh/dw/publications/publications.cfm

Pressure Relief Valves on Pressure Tanks (331-429), a one-page illustrated tech tip, explains design requirements, how pressure relief valves protect pressure tanks, and how to ensure pressure relief valves are approved and properly installed.

Contact our nearest regional office from 8 a.m. to 5 p.m. Monday through Friday. If you have an after-hours emergency, call (877) 481-4901.

Eastern Region, Spokane Valley (509) 329-2100

Adams, Asotin, Benton, Chelan, Columbia, Douglas, Ferry, Franklin, Garfield, Grant, Kittitas, Klickitat, Lincoln, Okanogan, Pend Oreille, Spokane, Stevens, Walla Walla, Whitman, and Yakima counties.

Northwest Region, Kent (253) 395-6750

Island, King, Pierce, San Juan, Skagit, Snohomish, and Whatcom counties.

Southwest Region, Tumwater (360) 236-3030

Clallam, Clark, Cowlitz, Grays Harbor, Jefferson, Kitsap, Lewis, Mason, Pacific, Skamania, Thurston, and Wahkiakum counties.

